



INSTRUCTIONS FOR REPLACEMENT HANDLE KIT FOR COMMERCIAL AND INDUSTRIAL MIP COMPACT BALL VALVES


PLEASE READ THE FOLLOWING INFORMATION PRIOR TO INSTALLING REPLACEMENT HANDLE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY. Colonial Valve guarantees its products against defects in material and workmanship only. Colonial Valve assumes no responsibility for damage or injury resulting from improper installation, misapplication, or misuse of any product.

FOR PURPOSES OF THIS INSTRUCTION SHEET, THE VALVE IS SHOWN UN-INSTALLED. THIS MAINTENANCE CAN BE PERFORMED WITH THE VALVE INSTALLED IN THE PIPING SYSTEM.

1. **Depressurize the piping system.** Valve should be in open position.
2. Pry the center cap off of the top of the handle.



3. With a Philips-head screwdriver, turn the exposed set-screw counter-clockwise to loosen and remove.
4. Pull handle upward to free it from the body. If the handle is broken, you may need to use Vice-Grips or other pliers to grasp the remaining part of the handle for removal.

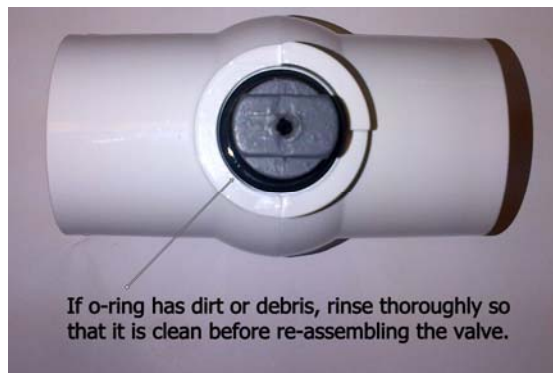

Caution: Do not let dirt or debris enter the body and settle on the o-ring with handle removed.

Over >>>>

5. Place new handle over stem and push down into body. The bottom of the handle is the o-ring sealing surface, so it must be pressed firmly into position.



6. Tighten new set screw so that it comes into contact with handle. Do not over-tighten.



7. Attach cap back over the top of the handle.



Revised 9/24/12

6400 Corporate Avenue, Portage, MI 49002
PH: 269-323-2495 or Toll-free 800-374-0234
Fax: 269-323-0630 or Toll-free 866-879-5982