



601NP SERIES 8 – 12” PVC WAFER CHECK VALVE INSTALLATION

6400 Corporate Avenue
Portage, MI 49002
269-323-2495 or 800-374-0234
Fax: 269-323-0630 or 866-879-5982
www.colonialengineering.com



(Spacer is required only for 8” size V80601NP Valve)

PLEASE READ THE FOLLOWING INFORMATION PRIOR TO INSTALLING AND USING COLONIAL VALVES and STRAINERS, AND OTHER ASSOCIATED PRODUCTS. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY.

1. Colonial Valve guarantees its products against defects in material and workmanship only. Colonial Valve assumes no responsibility for damage or injury resulting from improper installation, misapplication, or misuse of any product.
2. Colonial Valve assumes no responsibility for damage or injury resulting from chemical incompatibility between its products and the process fluids to which they are subjected. Compatibility charts provided in Colonial Valve literature are based on ambient temperatures of 70°F and are for reference only. Customer should always test to determine application correctness.
3. Consult Colonial Valve literature to determine operating pressure and temperature limitations before installing any Colonial Valve product. Note that the maximum recommended fluid velocity through any Colonial Valve product is FIVE feet per second. Higher flow rates can result in possible damage due to water hammer effect. Also note that maximum operating pressure is dependent upon material selection as well as operating temperature.
4. Colonial Valve products are designed primarily for use with non-compressible liquids. They should NEVER be used or tested with compressible fluids such as compressed air or gas.
5. **Systems should always be depressurized and drained prior to installing or maintaining valves.**
6. Temperature effect on piping systems should always be considered when the systems are initially designed. Piping systems must be designed and supported to prevent excess mechanical loading on Colonial Valve equipment due to system misalignment, weight, shock, vibration, and the effects of thermal expansion and contraction.
7. Because PVC plastic products become brittle below 40°F, Colonial Valve recommends caution in their installation and use below this temperature.



WARNING: Cancer and Reproductive Harm – www.P65Warnings.ca.gov

Colonial 601NP Series PVC Wafer Check Valves are designed to fit between two ANSI B16.5, Class 150 or DIN Flanges using a set of EPDM gaskets (included in the carton).

A spacer (Part # V80601NPS) is required when installing the V80601NP 8” Wafer Check, to allow the disc to open fully without coming into contact with the interior of a Sch 80 ANSI Class 150 flange. Use Bolt Set V80WCKG-A (Galvanized) or V80WCKS-A (304 SS), sold separately.

No spacers are required when installing the 10 & 12” wafer checks with Sch 80 ANSI Class 150 flanges.


FLANGE CONNECTION:

Use properly sized flat washers under every nut and bolt head. Failure to do so may lead to premature flange failure due to high stress concentrations. Bolts and nuts alone create a high stress point that not only cut into the plastic, but can cause failure in the flange. Washers distribute and reduce the bending force. See Table on page 2 for proper bolt, nut and washer sizes, and torque.

REV 041521 Updated Installation Precautions

Description	Qty	Tightening Torque (ft - lbs.)
FOR WAFER CHECK SIZE 8" (Length accomodates valve, spacer, and two flanges)		
3/4-10 X 10" THREAD HEX BOLT	8	20 -22
3/4-10 HEX NUT	8	
3/4 FLAT WASHER	16	
FOR WAFER CHECK SIZE 10" (Length accomodates valve and two flanges)		
7/8-9 X 6.50" HEX BOLT	12	23-26
7/8-11 HEX NUT	12	
7/8 FLAT WASHER	24	
FOR WAFER CHECK SIZE 12" (Length accomodates valve and two flanges)		
7/8-9 X 7.00" HEX BOLT	12	28-30
7/8-11 HEX NUT	12	
7/8 FLAT WASHER	24	

Clean and inspect flange sealing surfaces for dents and any other damage prior to assembly. Bolts and nuts should be clean and lubricated. Make sure bolt holes freely align and that flange faces are parallel to each other. Make sure that one end of the system is free to move enough to allow the faces to come together during tightening. Do not hang excessive weight from a flange. These steps need to be taken to prevent mechanical loading on the pipe and flanges. Tighten nuts in small increments with a wrench holding the bolt head and a torque wrench tightening the nut. Flange faces must remain parallel during bolt-tightening. Uneven tightening and / or over-torqueing will damage flanges. Tighten in a sequential, crisscross manner.

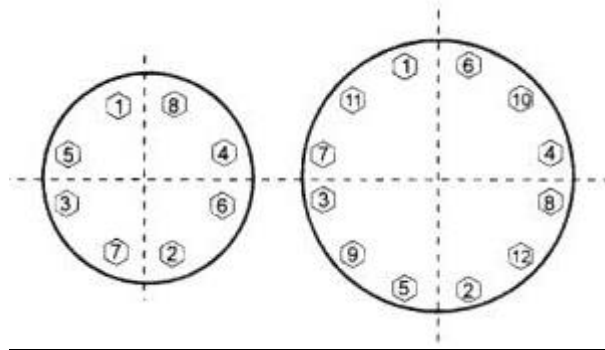

INSTALLATION PRECAUTIONS:

The following should be observed when installing onto the discharge side of a pump:

- **Never install the valve directly to a pump**
- **Never install the valve directly to a bend or elbow**
- **Install all wafer check valves a minimum of 10 times the nominal pipe diameter downstream of pumps, elbows or valves.**
- **Working pressure for V80601NP 8" wafer check is 100 psi (non-shock water at 73° F).**
- **Working pressure for 10 & 12" wafer check is 87 psi (non-shock water at 73° F).**

Be sure to install with the **FLOW ARROW** in the correct direction

